


To release the Trimble Field Points network license from one workstation so another can use it,

Open AutoCAD/Revit,


Open or start a drawing.

Tap on the Trimble Field Points tab

Click on the drop-down arrow beside Setup

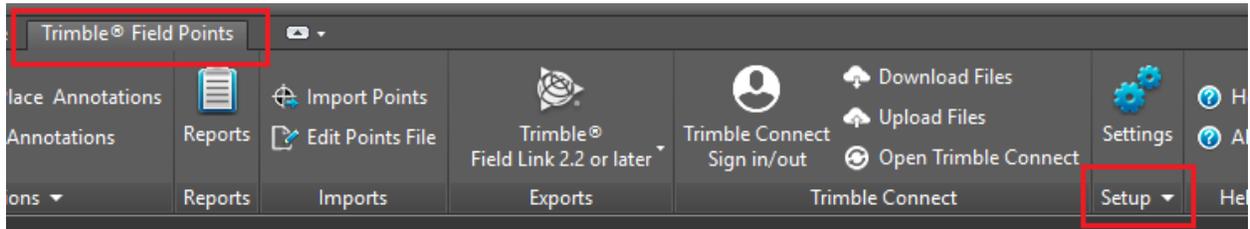

Then click on License Manager

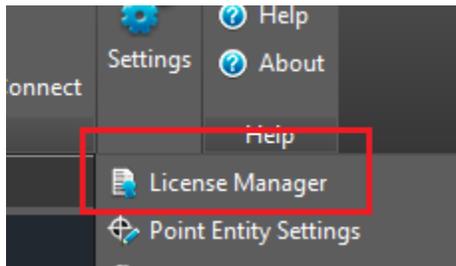

It will open the License Manager dialog box

**License Manager** ? X

**Instructions**

You can request or return a roaming license by clicking on the ellipse button on the Roaming field below.

You can also verify or change the license server name or TCP/IP Port number. .

To verify the license server name or Port number:

1. Log into the license server.
2. Check the system info.
3. Make note of the system name and TCP/IP Port.
4. If you need to make changes, enter the data from the license server system info in this screen.

Keep the following in mind when modifying data in this window:

- A Change to the license server name should be done only if the license server is moved to another server.
- Changing the Port number will cause connectivity conflicts to the license server (based on firewall settings). It is highly recommended that the default Port number is used. Contact your system administrator for more information.

**License**


Roaming	No	...
▼ Primary License Server		
Server Name or IP Address	127.0.0.1	
Port	5053	
▼ Backup License Server (optional)		
Server Name or IP Address		
Port	5053	
Current License From	127.0.0.1	

**General**

Host Name	JOSHEA-US-LE
Host Signature	trmbldgid=3F767232-24C3-C862-43B6-6F72E08B0349

Release      Activate      OK      Cancel

To release the license, click the Release button in the lower left hand corner

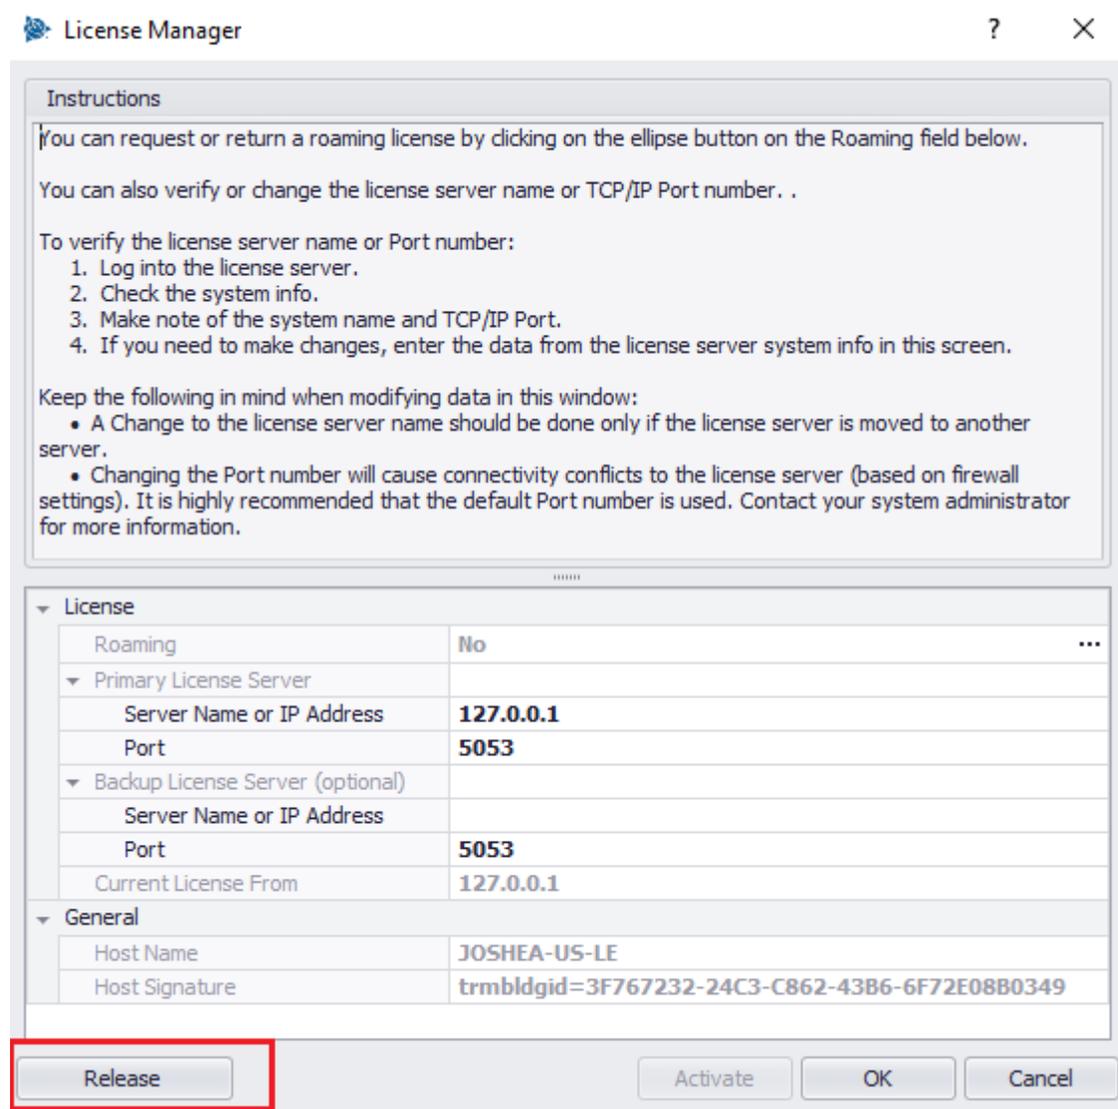

**License Manager** [?] [X]

**Instructions**

You can request or return a roaming license by clicking on the ellipse button on the Roaming field below.

You can also verify or change the license server name or TCP/IP Port number. .

To verify the license server name or Port number:

1. Log into the license server.
2. Check the system info.
3. Make note of the system name and TCP/IP Port.
4. If you need to make changes, enter the data from the license server system info in this screen.

Keep the following in mind when modifying data in this window:

- A Change to the license server name should be done only if the license server is moved to another server.
- Changing the Port number will cause connectivity conflicts to the license server (based on firewall settings). It is highly recommended that the default Port number is used. Contact your system administrator for more information.

**License**


Roaming	No	...
▼ Primary License Server		
Server Name or IP Address	<b>127.0.0.1</b>	
Port	<b>5053</b>	
▼ Backup License Server (optional)		
Server Name or IP Address		
Port	<b>5053</b>	
Current License From	<b>127.0.0.1</b>	

**General**

Host Name	<b>JOSHEA-US-LE</b>
Host Signature	<b>trmbldgid=3F767232-24C3-C862-43B6-6F72E08B0349</b>

**Release** [Activate] [OK] [Cancel]

On the workstation that wants the license, again open the License Manager Dialog box  
You will notice the button in the lower left-hand corner now says, "Get License"

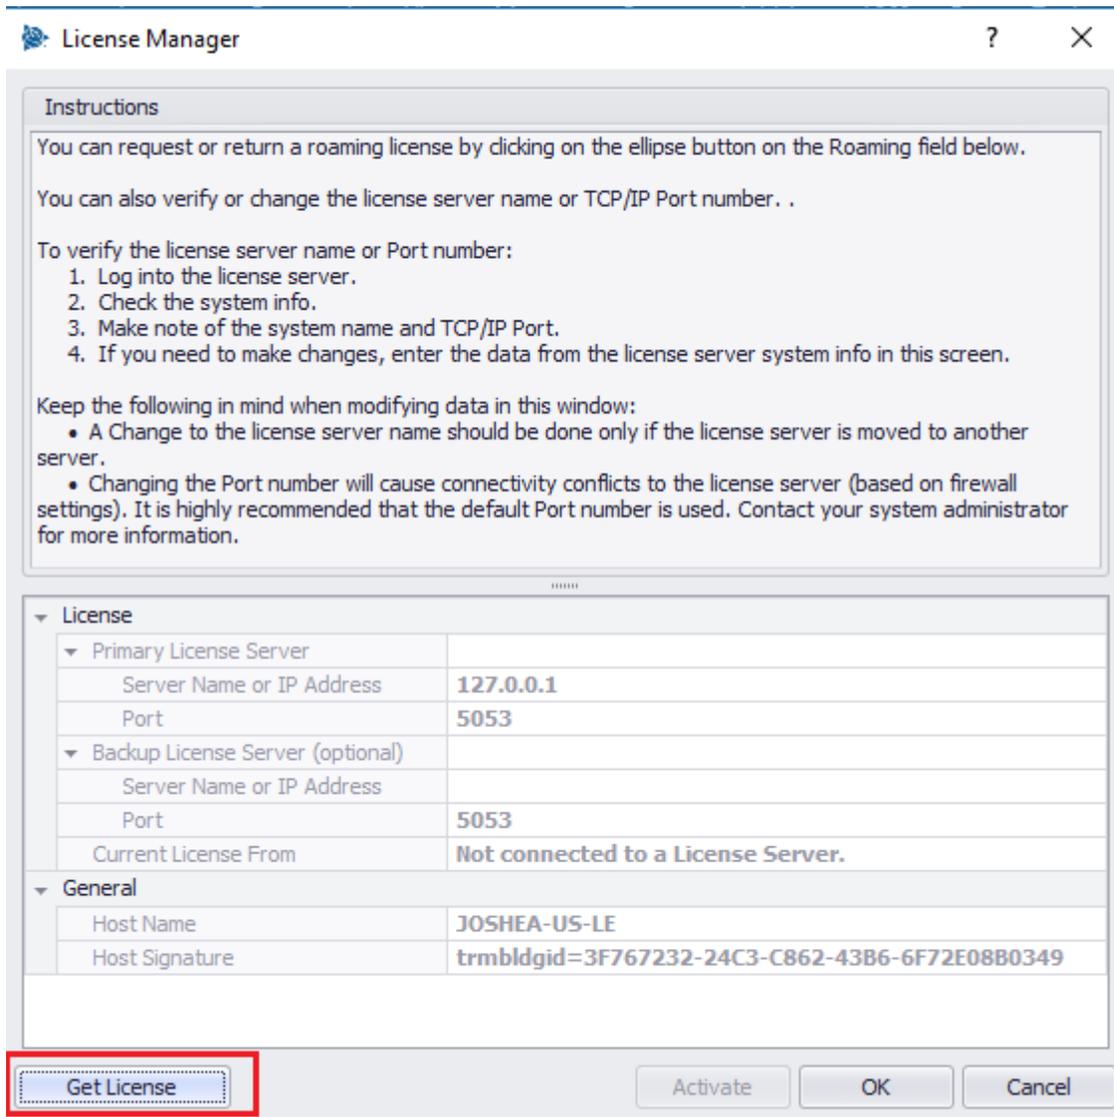

Click on it and that workstation will now have the license.