



X7 Quick Start Guide

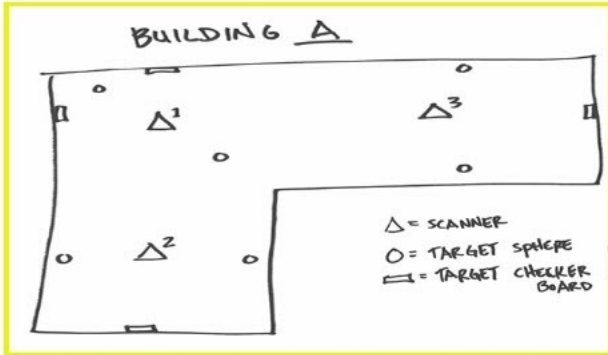


1 Plan Job and Scan Stations. Create Job in FieldLink.

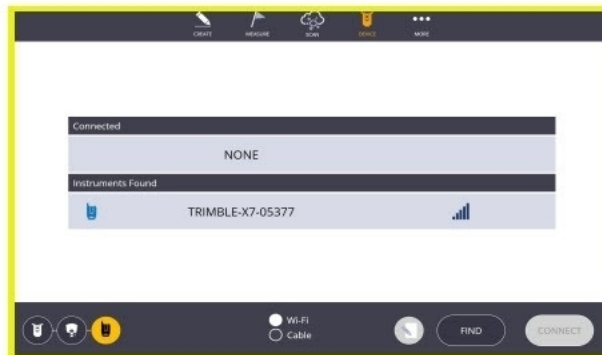

2 Connect Tablet to Scanner Via WIFI or Cable. Using WIFI, If Scanner doesn't Populate then Tap "Find". Once Found Tap "Connect".




3 Tap "More" and then "Map". Then Tap the "Project Tree" Icon. Tap Pencil in Top Right Corner to Create Scan Folder. Tap the "Folder +" sign. Name the Scan and Tap "Create". Tap "Apply"

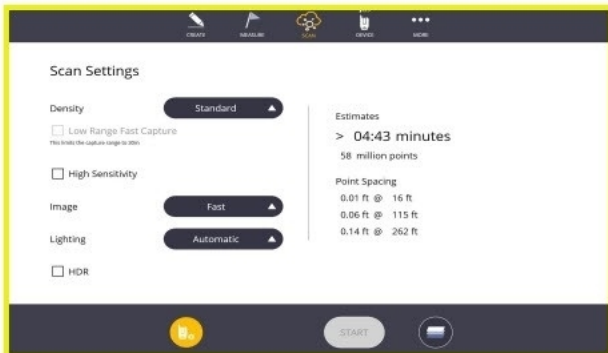

4 Tap "Scan" and then "Collect". Select Appropriate Scan Settings. (Job Specific)



5 Scanner Must be Level within 45 Degrees. Green Lights on Scanner Indicate it's Ready. Tap "Start".

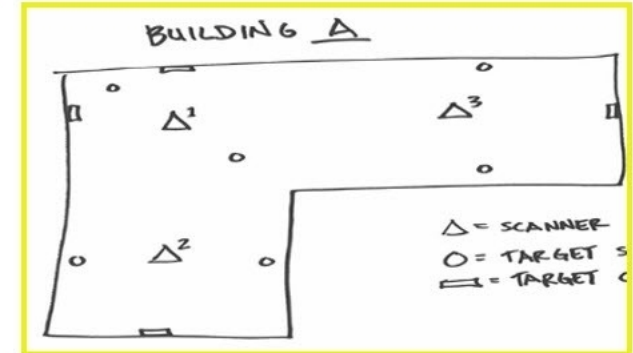

6 Move Scanner to Next Station. For Best Results Keep Stations within 20-30m for Interiors and 10m for Exteriors.